


# Ultrathin Touch Slider RF Remote Controller

- Apply to single color, dual color ,RGB, RGB+W or RGB+CCT LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.
- White & Black available.

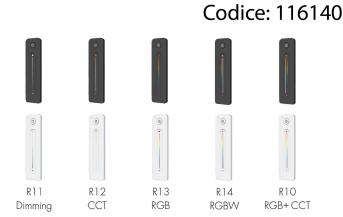


## CE RoHS emc RED

#### **Technical Parameters**

| Input and Output |                         | Safety and EMC        | Safety and EMC  |                       | Package             |  |
|------------------|-------------------------|-----------------------|---|-----------------------|---------------------|--|
| Output signal    | RF(2.4GHz)              | 5110 · 1 1/5110)      | ETSI EN 301 489-1 V2.2.3<br>ETSI EN 301 489-17 V3.2.4 | Size                  | L156 x W48 x H22mm  |  |
| Working voltage  | 3VDC(CR2032)            | EMC standard (EMC)    |   | Gross weight          | 0.075kg             |  |
| Working current  | <5mA                    | Safety standard       | EN 61348-1:2015+A1:2021<br>EN 61348-2-13:2014+A1:2017 | Environment           |                     |  |
| Standby current  | <10µA                   |                       |   | Operation temperature | Ta: -30 °C ~ +55 °C |  |
| Standby time     | 1 year                  | Radio Equipment (RED) | ETSI EN 300 328 V2.2.2                                | Warranty              |                     |  |
| Remote distance  | 30m(Barrier-free space) | Certification         | CE, EMC, RED  | Warranty              | 5 years             |  |

#### Mechanical Structures and Installations

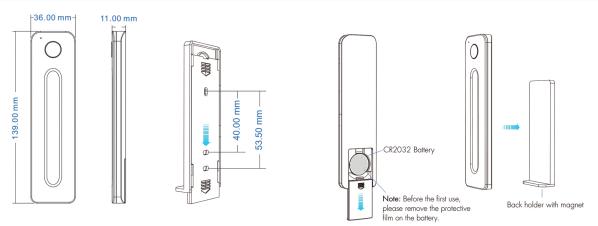

## To fix the remote, three options are offered for selection:

- Option 1. can be adsorbed directly onto metal surfaces.
- Option 2. fix the remote' back holder on the wall with two screws.
- Option 3. adhere the remote' back holder to the wall with paster.

## Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

## Use the controller's Match key

Match:

Short press match key, immediately press on/off key on the remote.

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match,

The LED indicator fast flash a few times means all matched remotes were deleted.

#### Use Power Restart

Match:

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key 3 times on the remote.

The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again.


Immediately short press on/off key 5 times on the remote.

The light blinks 5 times means all matched remotes were deleted.




Codice: 116140

#### Key function

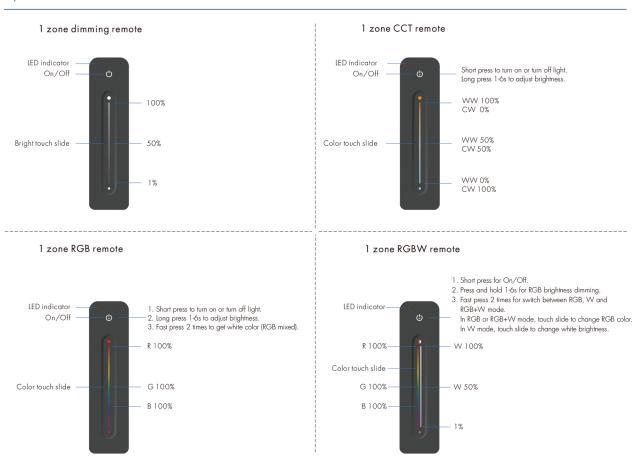

### 1 zone RGB+CCT

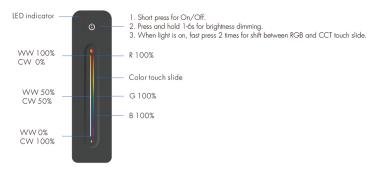

## Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity.
  - A long time without the remote control, remove the battery.
  - When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.1.3 Page 2